## Installation

- When unpacking, make sure the safety station is intact.
  Complete KN 1902P-00:
  Safety station not assembled, emergency signs and installation directions.
- 2. The safety station must have a flow of 120 litres per minute for emergency shower and 14 litres for eye wash, to function properly. The pipe dimensions must be adjusted to this flow!

Water supply connection: DN 25 female

Do not install the emergency shower if correct flow can not be guaranteed!

The flow and pressure regulator of the emergency shower work automatically at 1,5-6,5 bar. If the pressure exceeds 7 bar it will be necessary to install a reducing valve.

- 3. Flush through the system thoroughly so that grindings and other particles are removed.
- **4.** Install the shower as close as possible to the danger-zone. The shower must be secured so it can hold a weight of minimum 75 kilo.
- **5.** Attach the enclosed emergency signs clearly visible.
- **6.** Connect a waste pipe if necessary.
- 7. Check the function of the eyewash by flushing several times.
- **8.** Hand over the instruction sheet to the safety supervisor or other responsible personnel.

## Maintenance and operating instructions

- 1. Inform and train the personnel in question about the function of the drench shower and where it is located.
- **2.** The safety station is always in working order.

The emergency shower activates by pulling the handle/rod downwards. The eye wash is activated by the push plate. The valves are not self-closing.

- **3.** The safety station must be easily accessible for immediate use by the victim. Make sure that the area in front is not blocked.
- **4. Practice the use of the device continuously.** By doing so, you will avoid stagnant water in the pipes. **Old water accumulates bacteria.**
- 5. Use safety goggles.



Krusman Nödduschar AB Phone: +46 (0)21 14 92 00 Fax: +46 (0)21 14 92 50 info@krusman.se www.krusman.com